

#### 7610 DECK MOUNTED CONFIGURATION

(SEE SHEET 2 FOR 7610 WALL MOUNTED CONFIGURATION) (SEE SHEET 3 FOR 7610 DECK MOUNTED DETAIL)

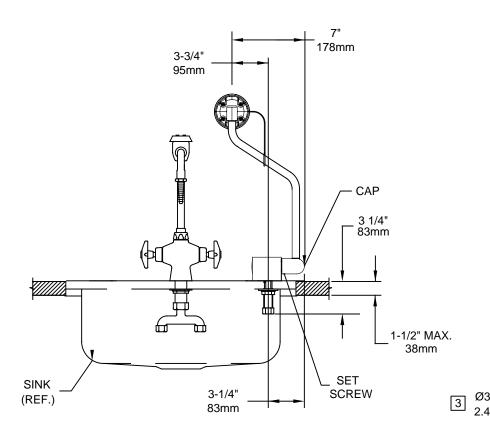

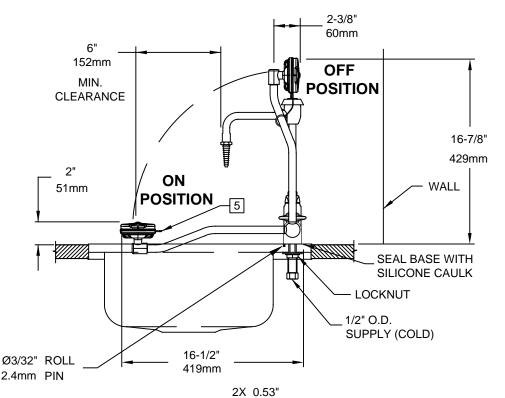

13.5mm

Ø 7/8" 22mm

FRONT OF SINK

## **NOTES:**

- 1. WHEN INSTALLING THIS UNIT, LOCAL, STATE, OR FEDERAL CODES SHOULD BE ADHERED TO FOR INSTALLATION DIMENSIONS (LOCATIONS), WASTE AND SUPPLY REQUIREMENTS OTHER THAN SHOWN.
- THE ANSI Z358.1-2009 STANDARD SPECIFIES EYEWASH NOZZLE HEIGHTS TO BE 83.8cm (33 IN.) TO 114.3cm (45 IN.) ABOVE THE FLOOR AND 15.3cm (6 IN.) MINIMUM FROM WALL OR NEAREST OBSTRUCTION.
- 3 DRILL ONE Ø7/8" [22mm] HOLE AND TWO Ø5/32" HOLES WHERE UNIT IS TO BE INSTALLED. REFER TO MOUNTING HOLE DETAIL.
- 4. THESE DIMENSIONS MAY VARY ±1/2" [6.4mm].
- 5 ASSEMBLE EYE/FACE WASH TO ARM, ORIENT TAB ON ASSEMBLY AWAY FROM USER.

## **MOUNTING HOLE DETAIL**




2X 0.53"


13.5mm

2X Ø 5/32" 3.18mm

# CONVERT TO WALL MOUNT CONFIGURATION

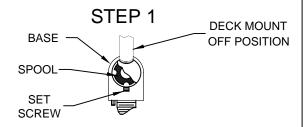


UNIT IS SHIPPED IN DECK MOUNT CONFIGURATION. TO CONVERT TO WALL MOUNT CONFIGURATION, POSITION ARM IN "DECK MOUNT OFF POSITION" AS ABOVE.

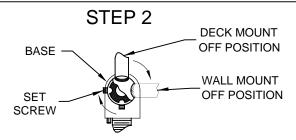

NOTE DEPTH OF SET SCREW PRIOR TO LOOSENING.
LOOSEN SET SCREW AND ROTATE EYEWASH ARM 90
DEGREES CLOCKWISE (AS SHOWN) WHILE MAKING
SURE TO NOT ROTATE THE SPOOL. RETIGHTEN SET
SCREW IN NEW POSITION. ENSURE SET SCREW IS
PROPERLY SEATED IN THE INDENT. MAKE SURE THE
SET SCREW IS TIGHT AND AT ITS ORIGINAL DEPTH.
ENSURE CORRECT ARM ORIENTATION BEFORE
MOUNTING TO WALL. REFERENCE DRAWINGS AT RIGHT.

## **7610 WALL MOUNTED CONFIGURATION**

(SEE SHEET 1 FOR 7610 DECK MOUNTED CONFIGURATION) (SEE SHEET 3 FOR 7610 DECK MOUNTED DETAIL)

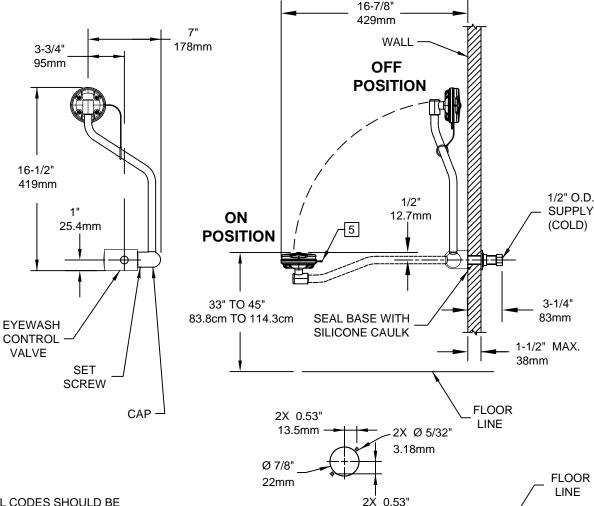

## **NOTES:**

- WHEN INSTALLING THIS UNIT, LOCAL, STATE, OR FEDERAL CODES SHOULD BE ADHERED TO FOR INSTALLATION DIMENSIONS (LOCATIONS), WASTE AND SUPPLY REQUIREMENTS OTHER THAN SHOWN.
- THE ANSI Z358.1-2009 STANDARD SPECIFIES EYEWASH NOZZLE HEIGHTS TO BE 83.8cm (33 IN.) TO 114.3cm (45 IN.) ABOVE THE FLOOR AND 15.3cm (6 IN.) MINIMUM FROM WALL OR NEAREST OBSTRUCTION.
- 3 DRILL ONE Ø7/8" [22mm] HOLE AND TWO Ø5/32" HOLES WHERE UNIT IS TO BE INSTALLED. REFER TO MOUNTING HOLE DETAIL.
- 4. THESE DIMENSIONS MAY VARY ±1/2" [6.4mm].
- 5 ASSEMBLE EYE/FACE WASH TO ARM, ORIENT TAB ON ASSEMBLY AWAY FROM USER.


## **3 MOUNTING HOLE DETAIL**

13.5mm



#### **7610 DECK MOUNTED CONFIGURATION**


(SEE SHEET 1 FOR 7610 DECK MOUNTED CONFIGURATION)
(SEE SHEET 2 FOR 7610 WALL MOUNTED CONFIGURATION)

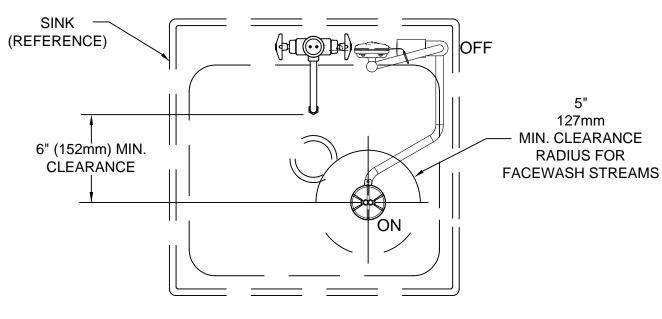

## **DECK MOUNT DETAIL**

### **NOTES:**

- WHEN INSTALLING THIS UNIT, LOCAL, STATE, OR FEDERAL CODES SHOULD BE ADHERED TO FOR INSTALLATION DIMENSIONS (LOCATIONS), WASTE AND SUPPLY REQUIREMENTS OTHER THAN SHOWN.
- THE ANSI Z358.1-2009 STANDARD SPECIFIES EYEWASH NOZZLE HEIGHTS TO BE 83.8cm (33 IN.) TO 114.3cm (45 IN.) ABOVE THE FLOOR AND 15.3cm (6 IN.) MINIMUM FROM WALL OR NEAREST OBSTRUCTION.
- 3 DRILL ONE Ø7/8" [22mm] HOLE AND TWO Ø5/32" HOLES WHERE UNIT IS TO BE INSTALLED. REFER TO MOUNTING HOLE DETAIL.
- 4. THESE DIMENSIONS MAY VARY ±1/2" [6.4mm].
- 5 ASSEMBLE EYE/FACE WASH TO ARM, ORIENT TAB ON ASSEMBLY AWAY FROM USER.

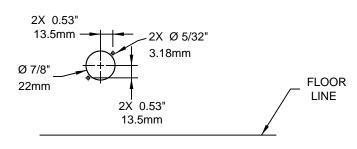

## **3 MOUNTING HOLE DETAIL**

